



HKC P774A Digitizer Replacement

This guide will allow you to replace the digitizer.

Written By: Sean McCauley



INTRODUCTION

The digitizer is the part that fits in front the LCD. This is records touch feedback.



TOOLS:


- [Precision Tweezers Set](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)



PARTS:

- [HKC P774A Digitizer](#) (1)

Step 1 — Digitizer

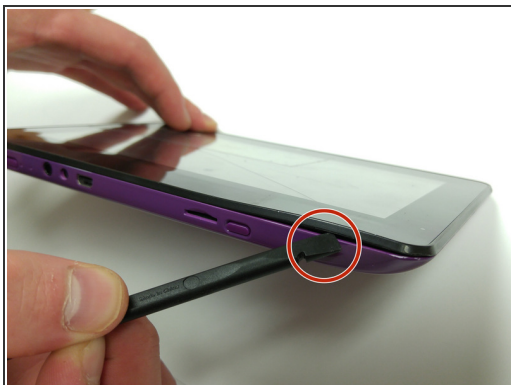

- Insert the flat end of the spudger into the side of the device
- This will create a gap between the device and screen housing.
- Insert the plastic opening tool into this gap and move it along this gap.

⚠ Make sure not to bent the digitizer during this step.


- The screen housing and device will now be separated.

Step 2



- Once the digitizer has been removed from the body, disconnect the digitizer band from the motherboard.
- Two small black pins (circled in red) will need to be unlocked.
- Unlock the pins by pulling them outward with the tweezers.
- ⚠ Make sure the pins are released entirely before attempting to remove the band.
- Remove the band using the tweezers.

Step 3

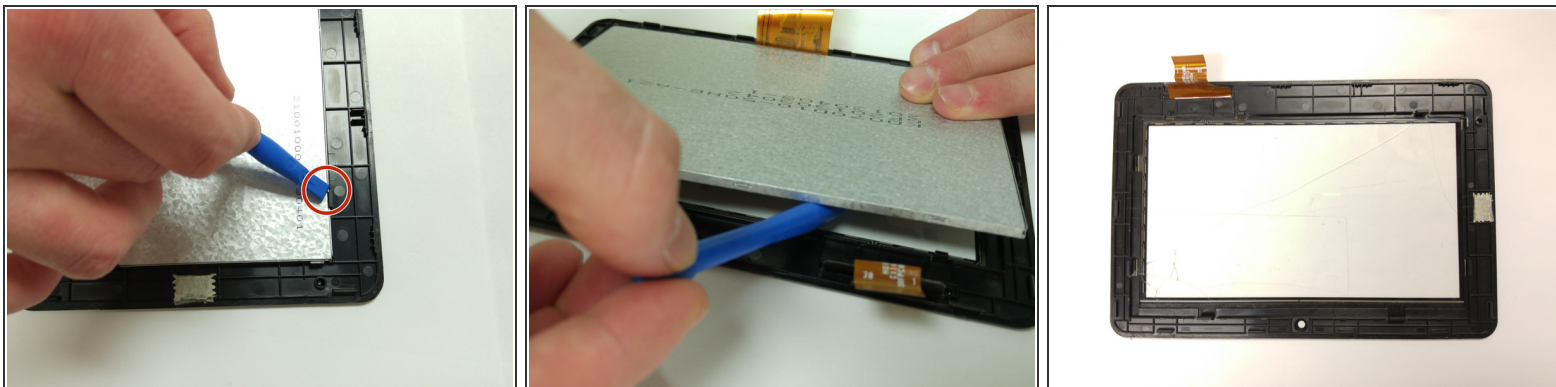

- Once the digitizer has been disconnected from the motherboard, the LCD screen must be removed from the digitizer.
 - Push open the tabs (circled in red) using the flat end of the plastic spudger.
- ⚠ Be sure not to bend the digitizer while prying.
- Continue to release all tabs while continuing to pry the LCD away from the digitizer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 03:33:25 PM.